Specifications

| Frequency Range: Option SUB: Option UHF: Accuracy: Tuning Resolution: | MS1000 | MS1200 | MS1300 | MS1400 |
|---|-----------------------------|-------------------------------|-------------------------------|-------------------------------|
| | 45 to 550 MHz | 45 to 550 MHz | 45 to 550 MHz | 5 to 890 MHz |
| | N/A | 5-45 MHz | 5-45 MHz | N/A |
| | 45 to 890 MHz | 45 to 890 MHz | 45 to 890 MHz | NA |
| | +-10 kHz@25 C | +-10 kHz@25 C | +-10 kHz@25 C | +-10 kHz@25 C |
| | (=-20 kHz over temp.) | (=-20 kHz over temp.) | (=-20 kHz over temp.) | (=-20 kHz over temp.) |
| | 25 kHz | 25 kHz | 25 kHz | 25 kHz |
| Level Measurment in dB Range: Resolution: | -20 to +50 dBMV | -20 to +50 dBMV | -20 to +50 dBMV | -20 to +50 dBMV |
| | 0.1dB | 0.1dB | 0.1dB | 0.1dB |
| Accuracy Flatness: Linearity: digiCheck™: | +-0.75 dB Flatness | +-0.75 dB Flatness | +-0.75 dB Flatness | +-0.75 dB Flatness |
| | +-0.75 dB Flatness | +-0.75 dB Flatness | +-0.75 dB Flatness | +-0.75 dB Flatness |
| | N/A | N/A | N/A | +/-2dB |
| Six Channel Mode Number of Channels: Scan Rate: | 6 | 6 | 6 | 6 |
| | < 1 second | < 1 second | < 1 second | < 1 second |
| Full Scan Mode Number of Channels: Scan Rate: | N/A | 120 Aprox 6 carrier/second | 120 Aprox 6 carrier/second | 120 Aprox 6 carrier/second |
| General Dimensions: Weight: Operating Temp Range: | 4.25"W x 10"H x 2.5"D | 4.25"W x 10"H x 2.5"D | 4.25"W x 10"H x 2.5"D | 4.25"W x 10"H x 2.5"D |
| | 0.8 kg. (1.75 lb) | 0.8 kg. (1.75 lb) | 0.8 kg. (1.75 lb) | 0.8 kg. (1.75 lb) |
| | 10 to 50 C | 10 to 50 C | 10 to 50 C | 10 to 50 C |
| | (14 to 122F) | (14 to 122F) | (14 to 122F) | (14 to 122F) |
| Water Resistant: | Exceeds MIL-STD-810D | Exceeds MIL-STD-810D | Exceeds MIL-STD-810D | Exceeds MIL-STD-810D |
| Powering Battery Life: Charge Time: | 3 hrs/replacement battery | 3 hrs/replacement battery | 3 hrs/replacement battery | 3 hrs/replacement battery |
| | 16 hrs unit off | 16 hrs unit off | 16 hrs unit off | 16 hrs unit off |
| | 30 hrs slow charge(unit on) | 30 hrs slow charge(unit on) | 30 hrs slow charge(unit on) | 30 hrs slow charge(unit on) |

Wavetek Wandel Goltermann Sales Offices

Brazi**I**

North America 1030 Swabia Court P.O. Box 13585 Research Triangle Park, NC 27709-3585

Tel. +1 919 941-5730 Fax +1 919 941-5751

East Europe Postfach 13 Elisabethstrasse 36

Austria Tel. +43 2252 85521 0 Fax +43 2252 80727

A-2500 Baden

CIS Countries 1st Neopalimovskiy per. 15/7 (4th floor)

Latin America

936-8/9. andar

Av. Eng. Luis Carlos Berrini,

04571-000 Sao Pau**l**o, SP

Tel. +55 11 5503 3800

Fax +55 11 5505 1598

119121 Moscow Russia

Tel. +7 095 248 2508 Fax +7 095 248 4189 Asia-Pacific

PO Box 141 South Melbourne, Victoria 3205 Australia

Tel. +61 3 9690 6700 Fax +61 3 9690 6750 **West Europe** Arbachtalstrasse 6

D-72800 Eningen u.A. Germany Tel. +49 7121 86 2222 Fax +49 7121 86 1222


Internet Address

www.wwgsolutions.com



StealthWare[™] Software

Signal level measurments can be uploaded for storing, viewing, and printing. StealthWare™ allows you to build channel plans and test locations which can be downloaded to the field meter. (MS1300, MS1400)

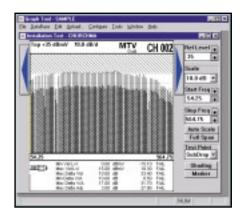

Multi-Lingual LCD Screen

The user interface is now fully converted in the international language requested: French, Portuguese, German, Spanish, Italian, and Dutch. (MS1400)



Upgradable to Leakage

The meters can be factory upgraded to a CLI-1450 to add leakage detection. They can also be upgraded to a CLI-1750, which when communicating with the LST-1700 transmitter, provides more installation test tools: mini-sweep and frequency domain reflectometry. (MS1400)

Product Information

| 1010-00-0341: | MS1000 | |
|---------------|--------|---|
| 1010-00-0347: | MS1200 | |
| 1010-00-0348: | MS1300 | |
| 1010-00-0448: | MS1400 | _ |

Options and Accessories

Model MS1000 / MS1200 / MS1300

| Includes a battery cartridge, one charger/AC adapter, operating manual and one spare input connector. | | | | |
|---|---|--|--|--|
| MSUHF: | Frequency extension to cover range: 45 to 890 MHz | | | |
| 1019-00-0476: | MicroStealth Soft Carrying Case | | | |
| 1019-00-0480: | Multiple battery cartridge charger | | | |
| 4010-00-0114: | Charger/Adapter 120VAC to 12VDC | | | |
| 1019-00-0473: | Charger/Adapter 220VAC to 12VDC | | | |
| 1219-00-1223: | Spare battery cartridge | | | |
| MBC-6: | Multiple 6-bay battery cartridge charger | | | |

Model MS1200 / MS1300

| MSSUB: | Frequency extension to include 5 to 45 MHz and reverse ingress scan mode |
|---------------|--|
| 1019-00-0470: | Cloning Cable |
| P-Stealth: | Portable serial thermal fusion printer kit (same as that used for Stealth products [Citizen PN60]; cable not included) |
| 1019-00-0468: | P-Stealth printer cable |
| 1019-00-0467: | Generic serial printer cable - 25 pin male connector |
| 1019-00-0469: | MicroStealth to PC Cable |

Model MS1400

| 1019-00-0476: | MS1400 Soft Carrying Case |
|---------------|--|
| 1019-00-0470: | Cloning Cable |
| 1019-00-0558: | Charger/Adapter with universal input, 12VDC output |
| 1019-00-0554: | European Charger/Adapter (CE compliant) |
| 4010-00-0119: | Charger/Adapter, 120 VAC to 12VDC |
| 1019-00-0479: | Spare Battery cartridge |
| 1019-00-0468: | P-Stealth printer cable |
| 1019-00-0467: | Generic serial printer cable- 25 pin male connector |
| 1019-00-0469: | MicroStealth to PC cable |
| 1019-00-0592: | Replacement RF input connector, f type Female/Female |
| 1019-00-0557: | Cigarette Lighter Adapter |
| 1019-00-0480: | MBC-6 Multiple 6-bay battery cartridge charger |
| 1019-00-0553: | P-MSCLI Printer Portable serial thermal fusion printer kit |
| 1019-00-1227: | OPT, Pilot Certification |
| | |



Intermittent ingress captured by peak hold.


▲ A display of the spectrum with clear preset limits allows the installer to easily identify ingress. All intermittent ingress is detected through flexible dwell-time setup (MS1400).

digiCheck Check Digital Signal Measurement


Making accurate digital average power and performance measurements are addressed with the digiCheckTM measurement function. (MS1400) The digiCheckTM average power measurement takes small slices of the integrated RF-energy, summing them together to provide one total power reading. It takes into account the channel flatness of the digital carrier itself.



▲ Digital-TV and forward cable modem signal.

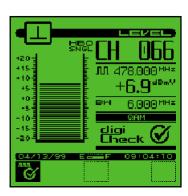

▲ The digiCheck™ method of measuring the total integrated RF-power under the haystack is very reliable and accurate. All level readings are fully compensated for by the correct occupied bandwidth.

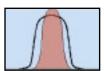

"Small-band" digital signals are like cable telephone carriers.

"Small-band" digital carriers, like cable telephony require a different measurement technique. For that purpose, the digiCheck feature offers a time average as well. Even in this case, all level readings are fully compensated for by the correct occupied bandwidth.



×

Digital and Analog Limits

Cable networks have analog and digital carriers. The levels of analog and digital signal measurements are different according to standards and regulations. Digital signals are typically 6-14 dB below analog signals. Users can enter minimum and maximum digital channel level limits separately from analog limits. Scan Mode, Installation Check, and Auto Test will accurately measure both digital and analog signals. This allows easy identification of the pass/fail condition of both channel limits sets.



▲ The MS1400 has a limit set for analog channels and a limit set for digital channels.

- Single Channel Display and Six Channel Scan have Pass/Fail indicators for quick performance
- Installation Check -Ensures FCC and CENELEC compliance, reducing subscriber call-backs
- Scan Mode Shows all channel levels at once, graphically identifying problems quickly and easily.
- Channel Plans can be stored, built, edited
- Ingress Scan Mode allows users to find forward and reverse ingress problems from the tap to the drop
- digiCheck™ Digital Signal Measurement -Measures DVB, Digital TV, Cable Modem, Internet, and Telephony on-cable services
- International Languages

 Available on the LCD screen allowing the user to learn and read the meter in their local language:
 - ~ Portuguese
 - ~ Italian
 - ~ Spanish
 - ~ Ġerman ~ French
 - ~ Frenci ~ Dutch





The results are displayed in a list indicating which parameters are out of tolerance. If all levels are within limits, a "✓" will be in the right far column. If any parameter is out of tolerance an "x" will be shown.







Pressing the "cycle" soft key provides more detail by bringing up a list of all channels. Passing channels have a "\s'" in the right hand column.






Pressing the "cycle" soft key provides a detailed view of what specific error is on the specific channel.

These results can be printed, (MS1200, MS1300, MS1400) or downloaded into the PC for report generation using StealthWare $^{\text{TM}}$ (MS1300, MS1400).



Tilt Mode

Tilt measurement is a fast and effective method to balance line extenders and in-home amplifiers.

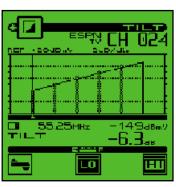



The tilt display provides a display of six channels that updates in less than a second. (MS1200, MS1300, MS1400)



Customized Channel Plans



Channel plans can be built, stored, and edited. This is convenient if you use the meter for more than one plant. You can quickly select the correct channel plan at which you are working. It's only necessary to build a channel plan once. A "cloning" function makes it possible to easily transfer channel plans from one field instrument to the

other. StealthWare TM software enables you to upload and download channel plans from your PC to the meter. (MS1300, MS1400)



Auto Test

To certify that the network termination and home network are within the specifications, or for proof-of performance compliance data, an auto-test can be performed. Test can be executed immediately or scheduled over a period of time. When configuring an Auto Test, you can record information about the location at which the test is being performed. Files can be created for commonly tested locations so you need only enter the information once. You can print a test report for each interval, or a comprehensive 24 hour report that summarizes data collected from up to four intervals.





Auto Test results are time, date, and temperature stamped and can be stored, viewed, printed or uploaded to StealthWare software. (MS1300, MS1400)



Ingress Scan

The innovative ingress scan mode finds forward and reverse ingress problems from the tap to the drop. Start/stop frequencies, resolution, and dwell time are programmable in the set-up menu. The operator can also set a limit threshold for simple identification of problem drops. To check for intermittent ingress, the meter can be adjusted to the peak hold mode to capture transient signals. Ingress scan displays can be saved for later printing or uploading to StealthWare software.

Testing the reverse path spectrum for sub-band signals being generated in the drop system improves the effectiveness of finding ingress sources and common path distortions.

MicroStealth's Power-Packed Features

Installing and maintaining today's cable networks can be challenging, but the MicroStealth meters make it easy. Choose the features that meet your requirements.

| Features | MS1000 | MS1200 | MS1300 | MS1400 |
|-----------------------------------|--------|--------|--------|--------|
| Icon Driven User Interface | • | • | • | • |
| 6 Channel Scan | • | • | • | • |
| Installation Check | • | • | • | • |
| Configure by Channel or Frequency | • | • | • | • |
| Channel Video/Audio Level & Delta | • | • | • | • |
| FCC & CENELEC Limit Check | • | • | • | • |
| Tilt Mode | | • | • | • |
| Cloning | | • | • | • |
| Prints Current Data | | • | • | • |
| All Channel Scan/Full Scan | | • | • | • |
| Ingress Scan in Reverse Band | | 0 | 0 | • |
| Ingress Scan in Forward Band | | | 0 | • |
| Customized Channel Plans | | | • | • |
| Stores Measured Results/Screens | | | • | • |
| 24 Hour - Auto Test | | | • | • |
| Prints Stored Results | | | • | • |
| Downloads to StealthWare | | | • | • |
| digiCheck™ - Digital Measurement | | | | • |
| Digital & Analog Limits | | | | • |
| Multi-Lingual LCD Screen | | | | • |

- Standard Feature
- O Option Available


| Frequency Ranges | MS1000 | MS1200 | MS1300 | MS1400 |
|--------------------------|------------|------------|------------|-----------|
| Standard Frequency Range | 45-550 MHz | 45-550 MHz | 45-550 MHz | 5-890 MHz |
| Optional Frequency Range | 45-890 MHz | 5-890 MHz | 5-890 MHz | N/A |

| Upgradable to ▼ | MS1000 | MS1200 | MS1300 | MS1400 |
|------------------------|--------|--------|--------|--------|
| MS1200 | • | N/A | N/A | N/A |
| MS1300 | • | • | N/A | N/A |
| MS1400 | _ | _ | _ | N/A |
| CLI-1450 | _ | _ | _ | • |
| CLI-1750 | _ | _ | _ | • |

Yes, Upgradable

Level Measurement

The MicroStealth provides a comprehensive single-channel display and a multi-channel display with pass/fail indicators. This quickly and clearly indicates if all channels are being received at the subscriber's drop at appropriate system design levels.

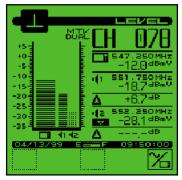




The single channel display shows the video and audio carrier levels and the difference between levels.
Compatible with dual sound and NICAM.







The six-channel scan shows six different user defined video carriers, with pass/fail indicator for user-defined limits.

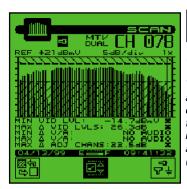



The Full Scan display shows all user-defined video carriers. The unique limit check feature quickly checks the results against user-defined analog **and** digital limits. (MS1200, MS1300, MS1400)



Installation Check

Pressing the "\(\mathcal{\scales}\)" key, provides an installation status check which allows users to verify all levels are within user-defined limits. Up to four different limits can be configured: tap, ground block, subscriber drop, and custom. This feature can be used to determine if a subscriber connection meets cable networks or government specifications.

MicroStealth



System bandwidth expansion and digital service deployment have placed more demands on installers and service technicians. Today's installers require a signal level meter that combines advanced measurement capability with the ruggedness needed for everyday field use.

The MicroStealth family of SLMs offers comprehensive, reliable measurement performance for every skill level of the cable networks technician and engineer. From field maintenance to installation, to troubleshooting today's more advanced networks, there is a MicroStealth designed to meet your specific testing needs. All models quickly locate, analyze, and repair network trouble, but each have additional features unique to specific testing and maintenance requirements.

Faster "Find and Fix"

The MicroStealth design enables installers to do their jobs faster and easier. First, all meters are lightweight and easy to carry, yet durable and water-resistant. Second, all have a user-friendly, icon-based user-interface. The simple icons are used in all MicroStealth meters, and all other WWG field meters. This translates to less training and less downtime for field techs & installers. Finally, the user interface is also available in international languages, allowing for ease of use throughout the world.

- Meeting every feature and requirement needed in a signal level meter
- User-friendly Icon-based user interface used throughout the entire WWG product line; multi-language operator screens available
- Efficient and high repeatability;
 Automated Testing;
 Convenient proof-ofperformance compliance testing. Tests can be done immediately and seen on screen or scheduled over a period of time and printed at a later date
- 95% of all forward and reverse ingress and interference is located in the distribution and home network. Advanced ingress spectrum scan helps you locate the source fast and easy
- Complete digital measurement solution for DTV and cable modem signals. digiCheck™ average power measurement including auto limit check

